




# FUSION

STONE


## DRY-STACK TECHNICAL APPLICATION GUIDE

# DRY-STACK TECHNICAL APPLICATION GUIDE


Typical Cross Section of Veneer Mounting System

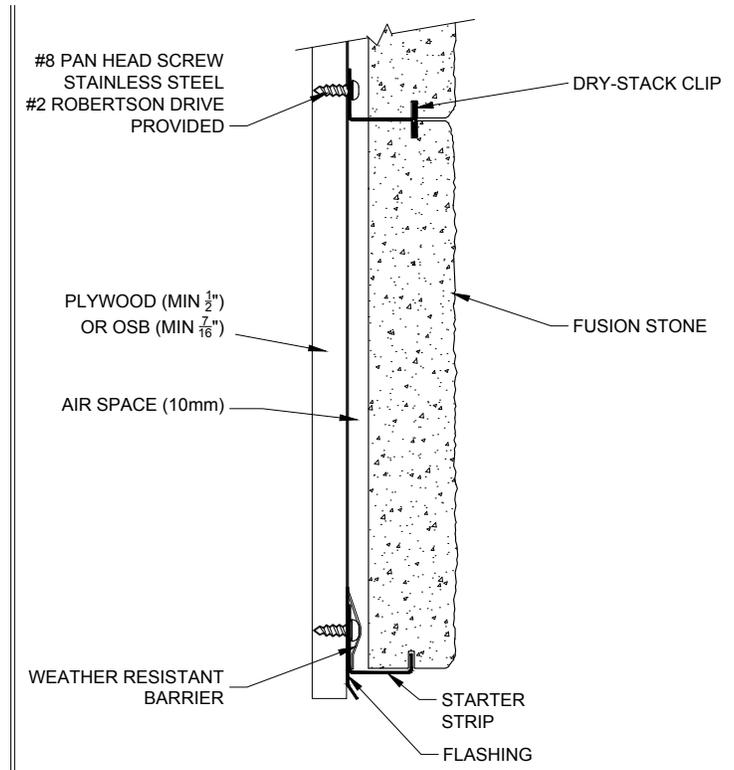


Typical Cross Section of Window / Door Sill

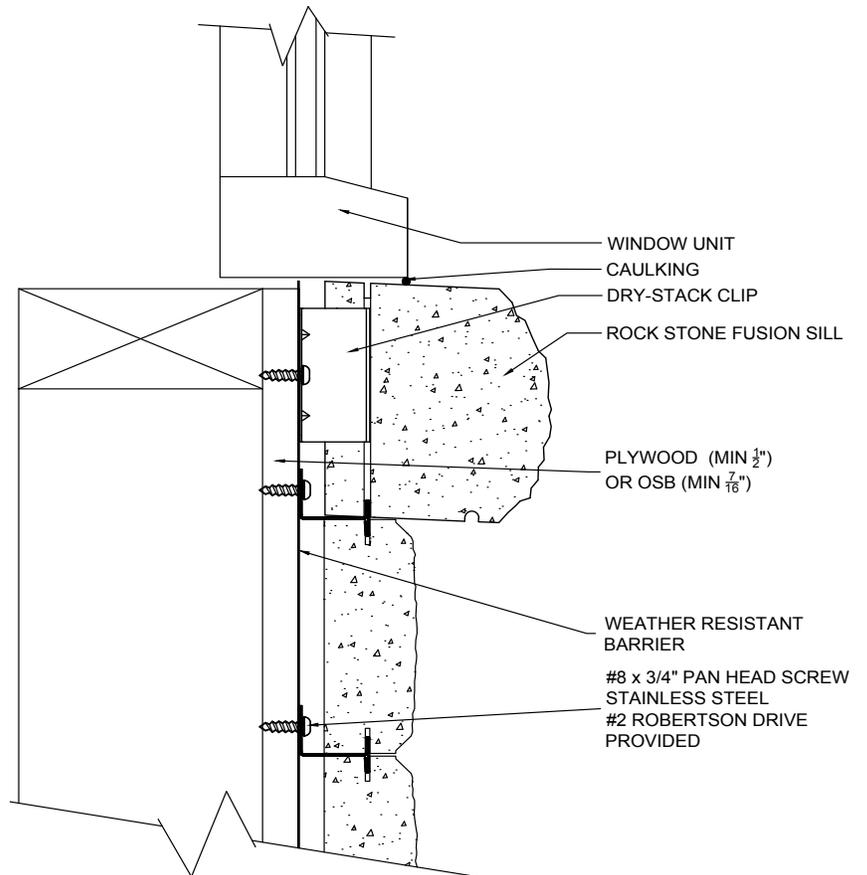


Typical Cross Section  
Type 1 Sheathing  
Flush w/ Foundation

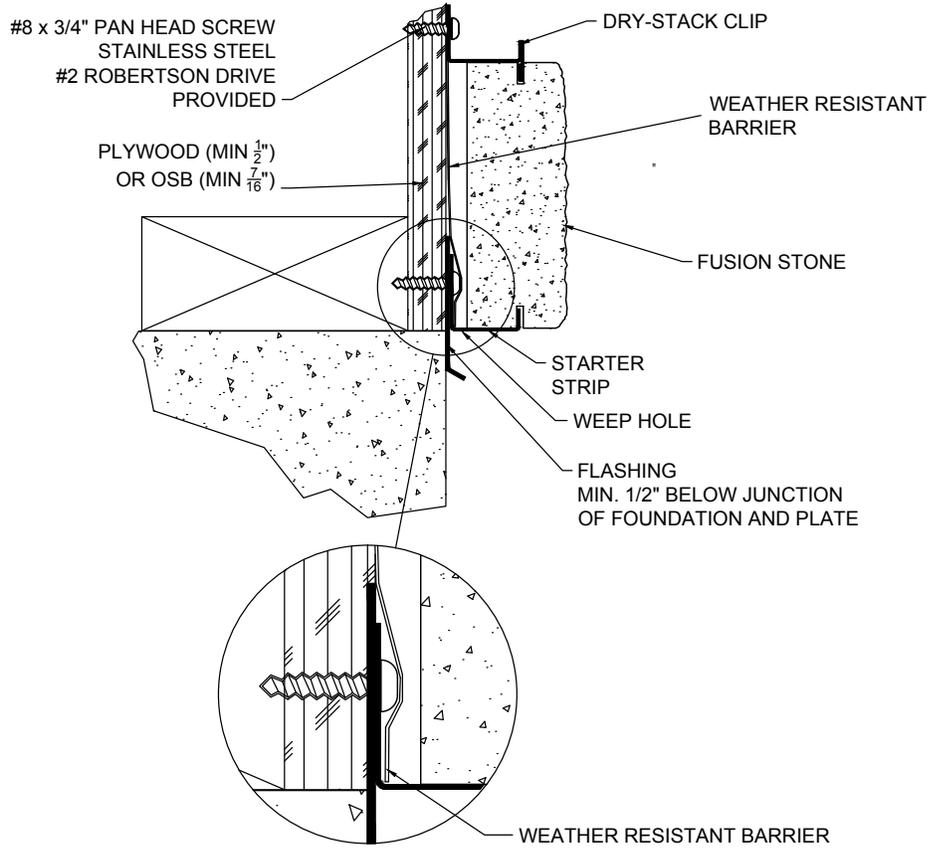


Typical Cross Section  
of Veneer Mounting System

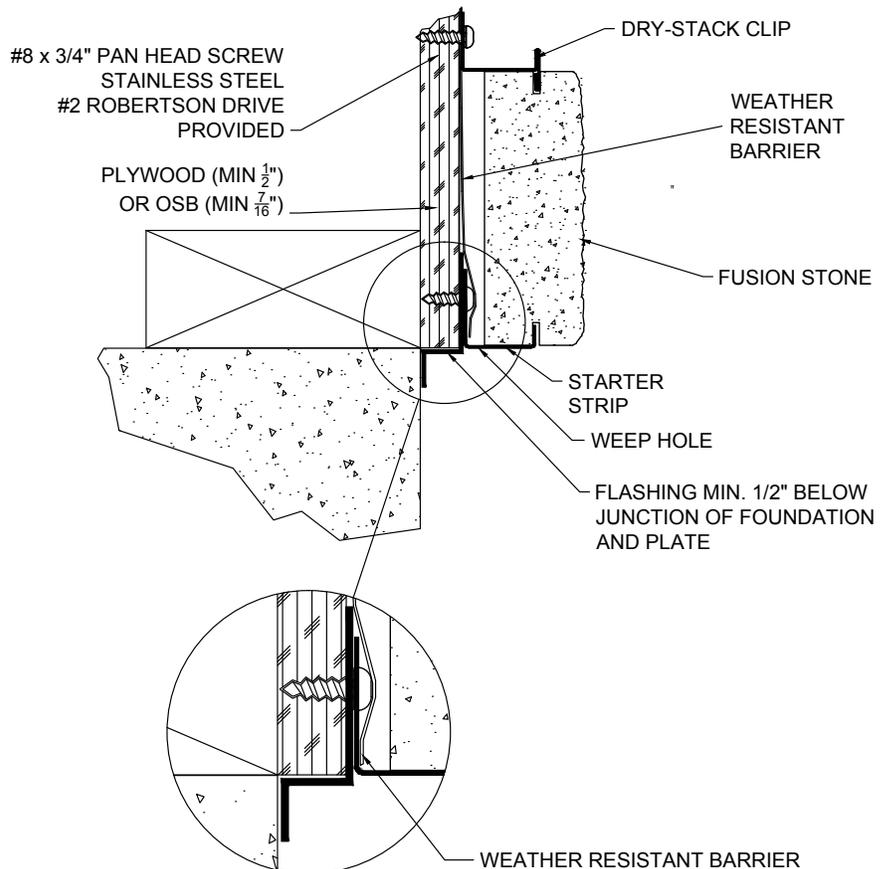


Typical Cross Section  
Window / Door Header

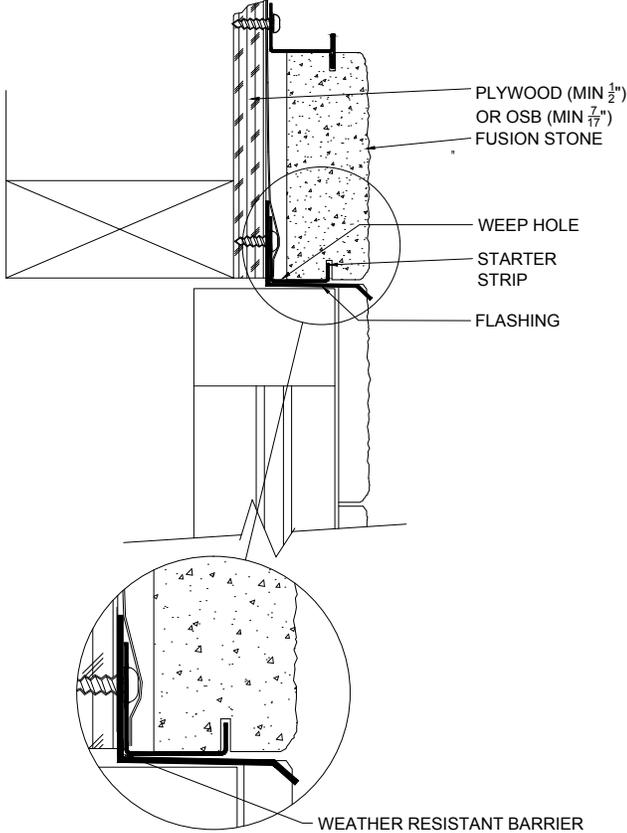


Typical Cross Section  
Wainscot Sill Transition to Siding

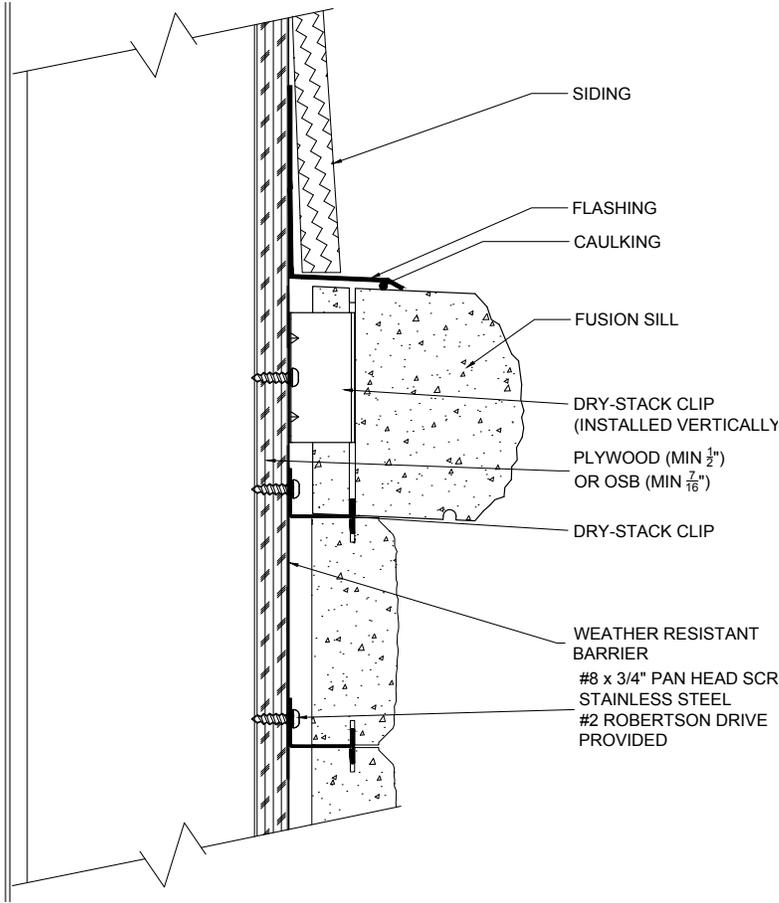


Typical Cross Section  
Wainscot Sill Transition to Stucco

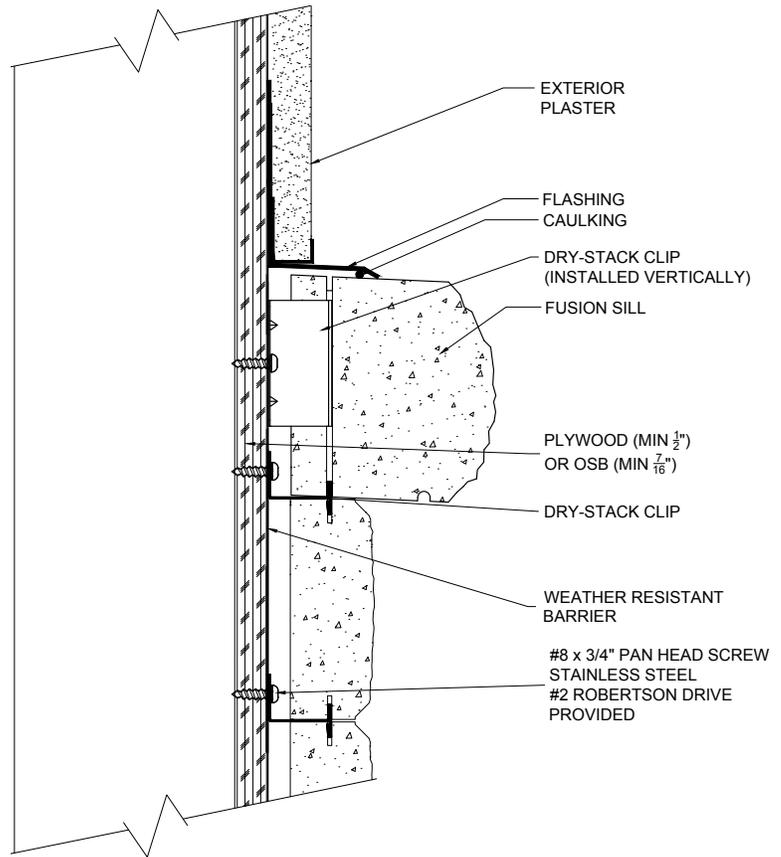


Typical Cross Section  
Transition Roof to Wall

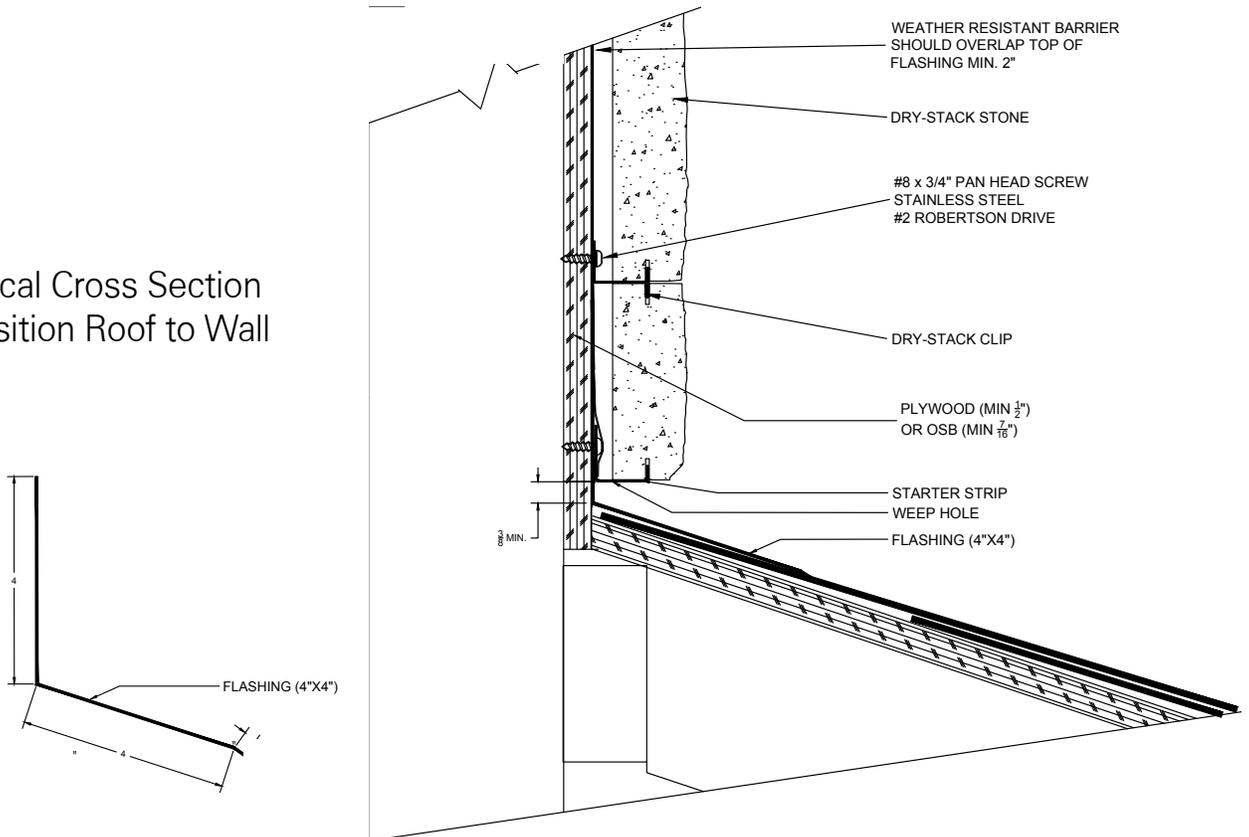


Typical Cross Section  
Concrete Block / Poured Cap

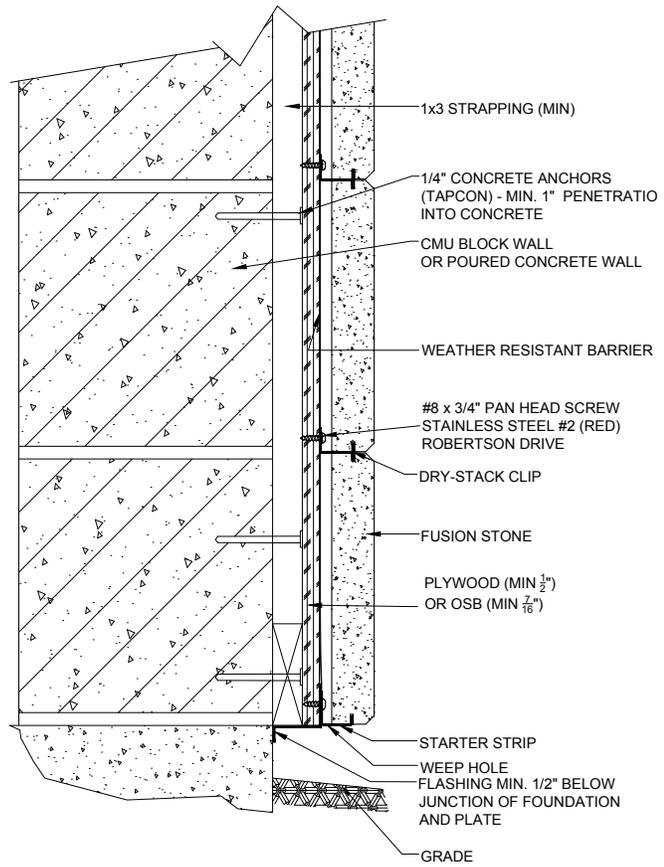

Typical Cross Section  
Wood Stud Wall  
Section with Rigid Insulation

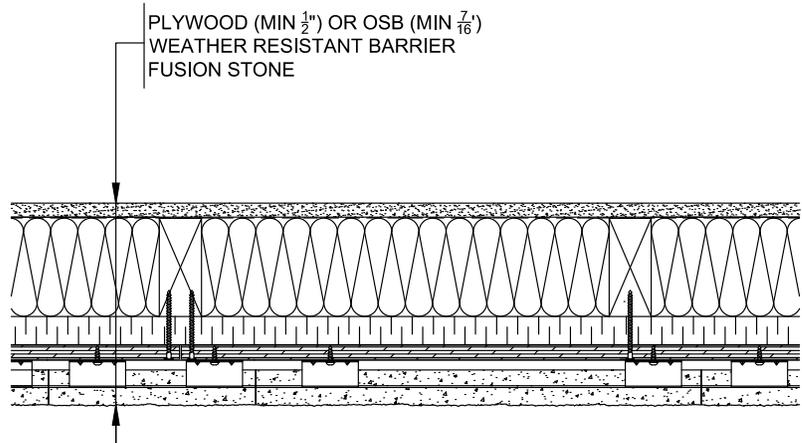


PLAN VIEW

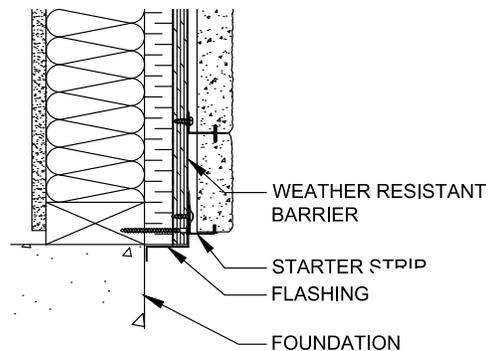


SECTION AT STARTER STRIP

Typical Cross Section  
ICF Wall - Plan View

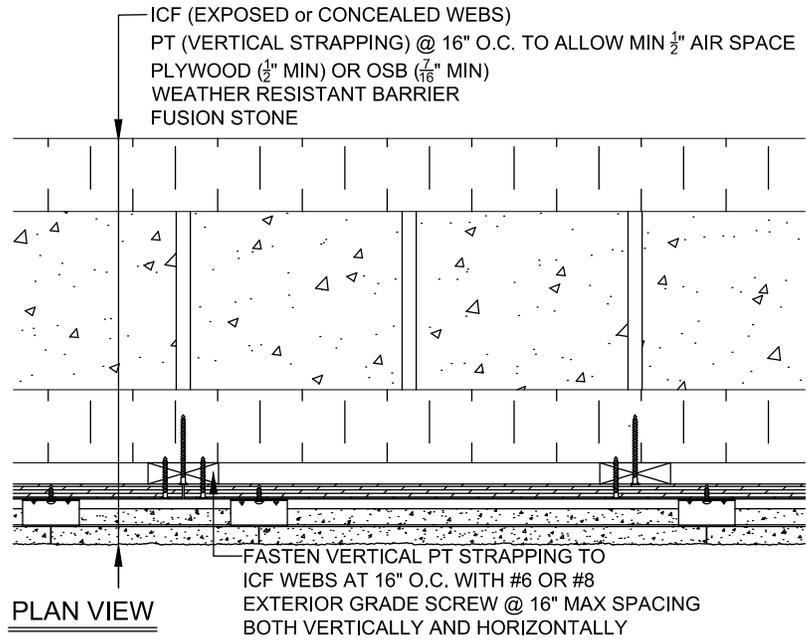

Typical Cross Section  
ICF Wall - Section View at  
Starter Strip

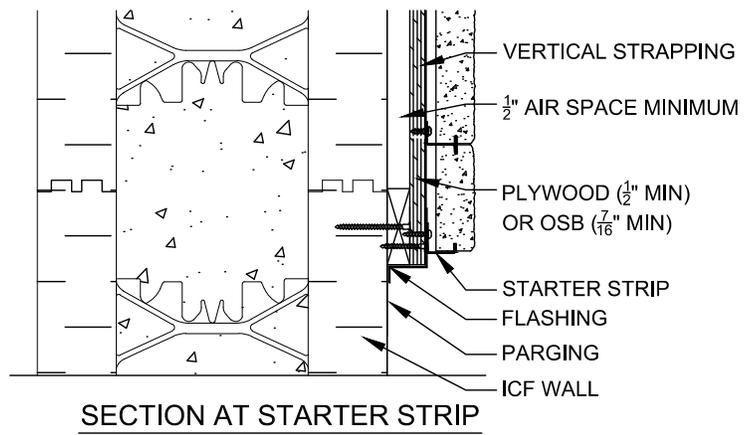



Proudly manufactured in Canada by Shouldice Designer Stone

281227 Shouldice Block Road, Shallow Lake, Ontario, N0H 2K0 CANADA  
800.265.3174 | [fusion@shouldice.ca](mailto:fusion@shouldice.ca)

**CCMC# 14008-R**